

Thermo-Bob 3™ Installation Manual

Kawasaki KX450F, 2006 and newer

Watt-man.com February 2015

Thermo-Bob 3™ installation on KX450F 2006 and newer

Thermo-Bob 3™ Installation

You know the drill: drain coolant into suitable container, don't drain it when it's hot, keep away from pets as it's toxic, refill system after all parts are installed, double-check all clamps are tight, verify that radiators are full after first heat cycle.


Remove a 1.9 inch section of factory hose that connects the engine exit to the radiators, insert Thermo-Bob 3 in that section as shown on the right. Note that the Thermo-Bob's cap screws face the radiator, not the engine.


Some people like to use the 7/8 to 3/4 inch reducer that came with the Thermo-Bob 3 kit to connect the engine exit to the Thermo-Bob inlet. The reducer is currently longer than you need, thus you will cut it down to size to fit your setup best. If you use it, you'll most likely have to purchase a larger clamp for this location as the stock clamp here might not quite be large enough.

The Thermo-Bob 3 housing has an additional threaded port for a KOSO or TRAIL TECH temperature sending unit (BSPP 1/8-28).

Since either sensor uses two wires, an external ground is not required so it's best to use Teflon tape or a good Teflon sealant on the temperature sensor threads during installation to avoid leaks.

The bypass hose is colored blue for easy identification and is discussed on the next page.

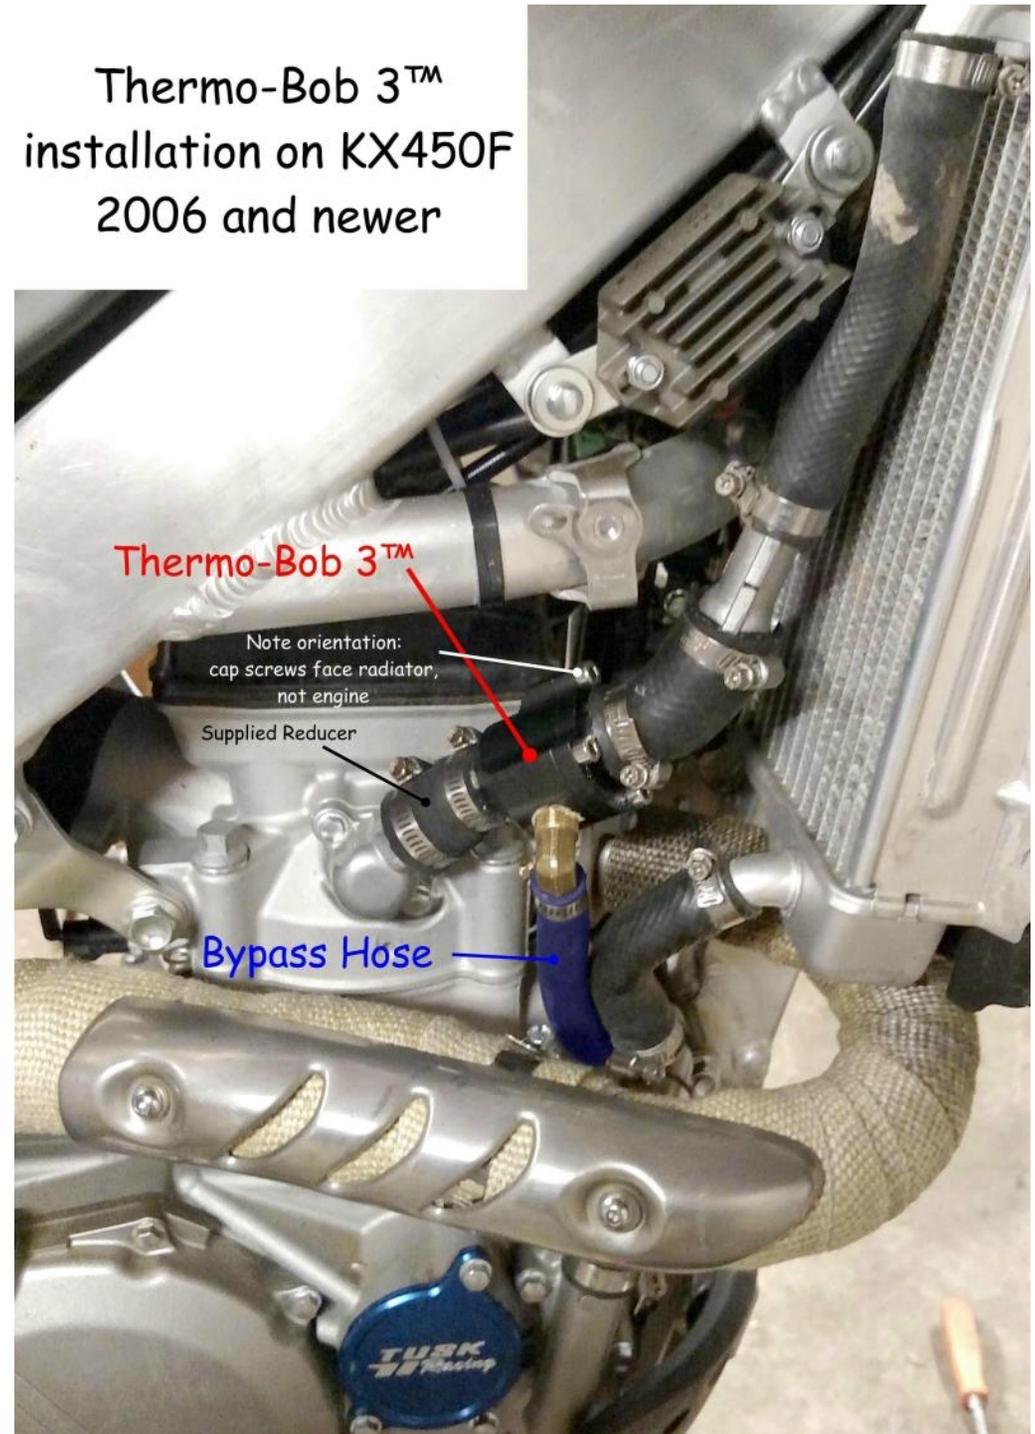

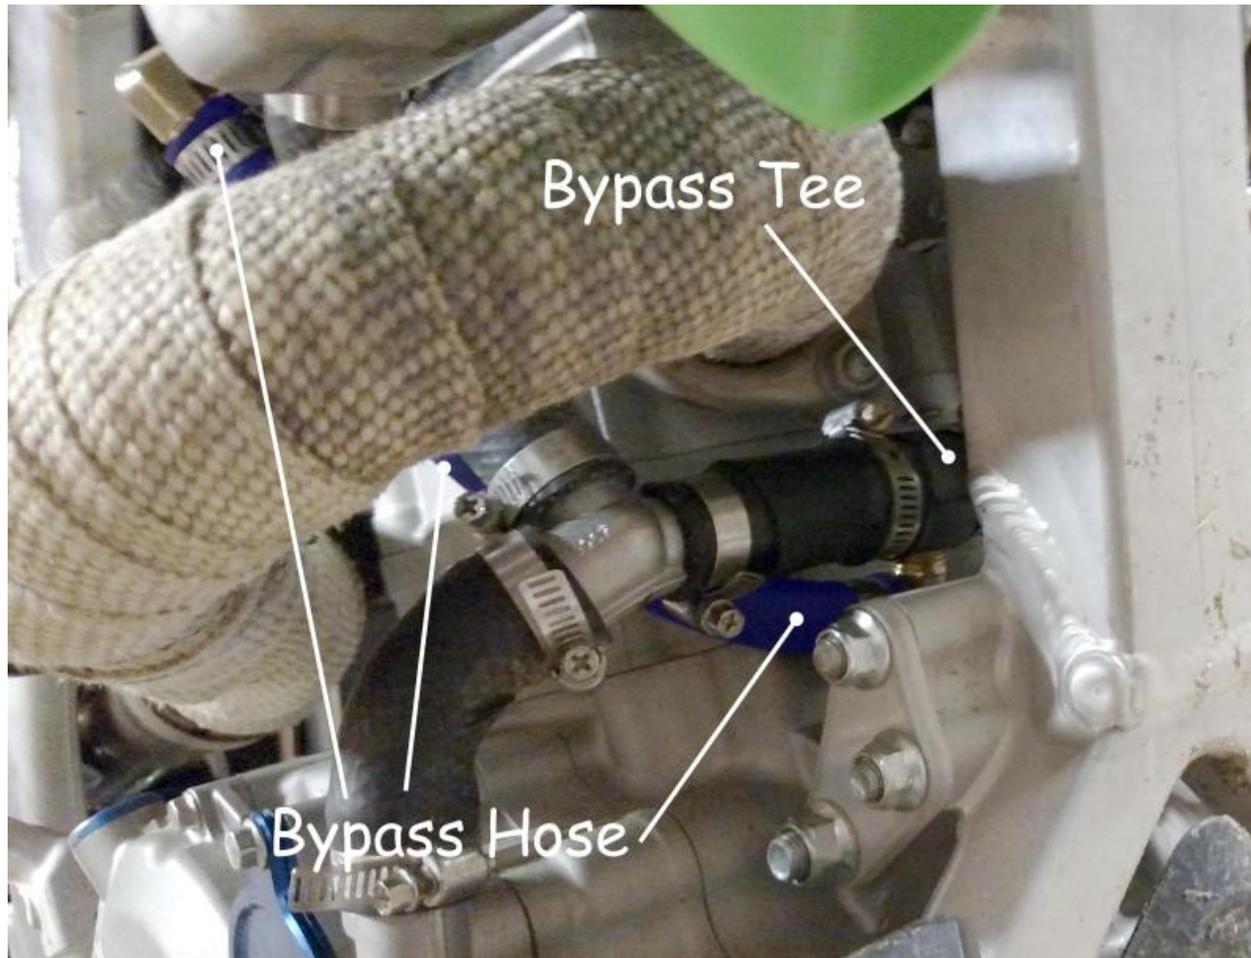

Bypass Tee Installation

Bypass tee installation details are on this page. The bypass hose is colored blue for easy identification.

Remove a 5/8 inch section of the Kawasaki hose that travels from the bottom of the left radiator to the Y-fitting as shown. Insert the bypass tee into the Kawasaki hose with the brass barb aimed to the right side of the bike as shown.

Slide the supplied small clamps onto the center of the bypass hose, then dip both ends of the bypass hose in coolant and wipe off the outside. This will lubricate the inside of the bypass hose, making it easier to slide on to the brass barbs.

Slide one end of the bypass hose on to the brass barb on the Thermo-Bob 3, and the other end on to the brass barb on bypass tee. Slide the clamps into place and tighten.

Double-Check that all clamps are tight before refilling the cooling system.